

## TECHNICAL DATA SHEET MAR – FINIXA MARKERS

### Product description

- Quick and handy marker to highlight damages or untreatable zones.
- Easily washable with a water-based degreaser.
- Available in 4 fluorescent colours: green, pink, blue and yellow.
- 2 sizes: Round 4mm or rectangular 15 x 7mm.

### Application

The temporary application of instructions on the surface (that has to be repaired or just not to be repaired) by means of a chalk base pen. By using chalk, the marked surface is easy to clean with a water-based degreaser without leaving any traces.

### Instructions for use

#### Activate

- Shake well for 30 seconds
- Remove the cap
- Press and hold the tip of the marker until the entire tip is coloured
- The marker is activated

#### Apply


##### 4mm marker

- Remove the cap
- Write the necessary information on the surface



##### 15x7mm marker

- Remove the cap
- Hold the pen in 1 of the 3 possible positions to write thinner or thicker

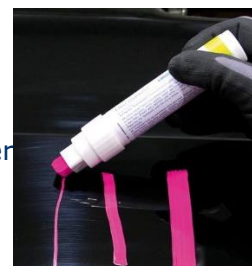

#### Remove

- Spray water-based degreaser on the described surface
- Clean with cloth

## CAUTION

Do not use the marker in direct sunlight, as this will dry out too quickly and may give a slight adhesion to the clear coat.

It will not be possible to remove this with water-based degreaser, it can then be removed by lightly polishing/cleaning the surface or by cleaning with iso-propanol.

## **Shelf life & storage**

Shelf life: 1,5 year

Storage: Store in a dry place, avoid direct sunlight and do and do not let the product freeze.

*The above information is given in good faith, but the user should assure himself that the performance of the product is sufficient for his application. The quoted values are average and should not be taken as maximum or minimum values for specific purposes. Chemicar Europe cannot be held responsible for product failure unless full testing has been carried out. The client has to decide on the products suitability for their own applications.*

**Chemicar Europe nv**  
Baarbeek 2  
2070 Zwijndrecht  
België-Belgium

T.: +32 3 234 87 80  
F.: +32 3 234 87 89  
info@chemicar.eu  
www.chemicar.eu